



For headphones connect ground to the right most pin.
 For a mixer or amp connect ground to the middle pin